

## PS Spray Sprinklers Instructions


### Installation Instructions

---

1. DO NOT REMOVE THE NOZZLE. The filter screen is accessible from the bottom of the riser.
2. Install all sprinklers; align the raised dot on top of each nozzle with what will be the right edge of the spray arc (looking from "behind" the sprinkler).
3. Unscrew the internal assembly from the last head on each lateral line.
4. Flush the lines. Replace the internal assemblies.
5. Adjust arc and radius for each sprinkler, as described below.

### Arc Adjustment

---

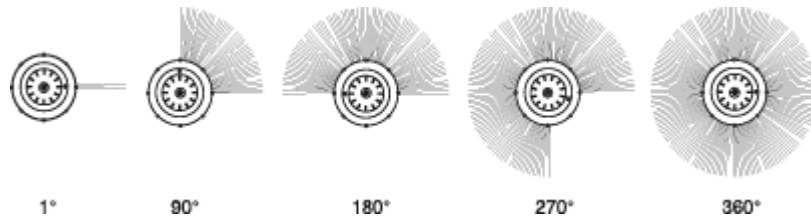

The sprinklers come from the factory with a preset spray arc of 1° (a very thin stream). The raised dot on top of the nozzle indicates the adjustable (left) edge of the spray pattern. With the raised dot aligned to the right-hand border of the coverage area, insert the Hunter wrench into the stainless-steel hex screw and turn the screw counter-clockwise to increase the arc. The nozzle turns with the screw, and both the arc of coverage and the discharge rate are increased.

### Radius Adjustment

---

Hold the plastic nozzle stationary by inserting the two pins on the side of a Hunter wrench between any of the nozzle spokes. With a second Hunter wrench, turn the stainless-steel hex screw clockwise to decrease, and counter-clockwise to increase the radius and discharge rate.

The radius should not be reduced more than 25%. (The sprinkler is pre-set at the factory for maximum radius.)